

Manually Programming the BaoFeng BF-F8HP

These steps do not need to be performed if programming with Chirps/Python

Enter Frequency Mode

 Input Receive Frequency (listed frequency)

Menu 2-7

 Input Channel Number — pick channel with no CH in front of channel number

Press the down arrow

Offset Frequency

 Press Menu

 Enter offset

 Press Menu

Press the down arrow

Shift

 Press Menu

 Select – or + with up/down arrow

 Press Menu to store

Exit

Menu 1-3

Transmit T-CTCS (tone frequency)

 Enter Tone Frequency (usually 100 KHz for 2m band, 5.0 MHz for 70cm band)

 Press Menu to store

Exit

Menu 1-1 If downlink tone is required. If not, then skip this step

Receive R-CTCS (tone frequency)

 Enter Tone Frequency (usually the same as T-CTCS)

Exit

Input new Transmit Frequency

Menu 2-7

Press Menu — Transmit frequency will be stored

Exit